


717218

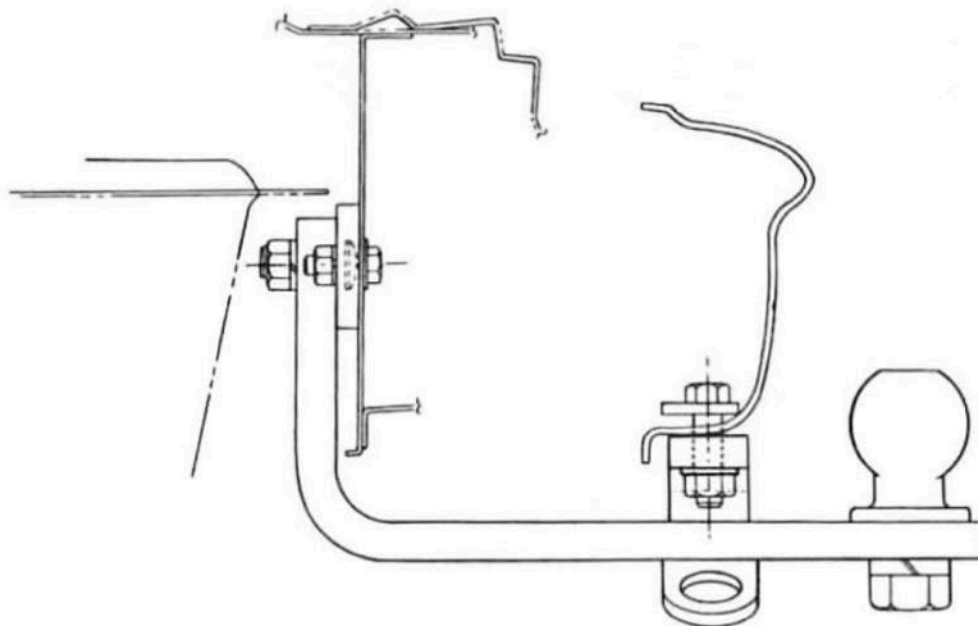

VIEW Z

INSTALLATION INSTRUCTIONS
1965-1966 ECONOLINE

1. ASSEMBLE THE TRAILER HITCH USING ONE 7/16 X 1 1/2 CARRIAGE BOLT, ONE 7/16 X 1 5/8 HEX. HD. BOLT, TWO 7/16 LOCKWASHERS, AND TWO 7/16 NUTS.
2. FASTEN THE HITCH ASSEMBLY IN POSITION, USING THE TWO EXISTING HOLES IN THE SILL, WITH TWO 5/16 HEX. HD. BOLTS, TWO 5/16 FLAT WASHERS, TWO 5/16 LOCKWASHERS, AND TWO 5/16 NUTS.
3. DRILL TWO 15/32 HOLES INTO THE BOTTOM SURFACE OF THE BUMPER USING THE FRONT BAR AS A TEMPLATE. FASTEN INTO PLACE WITH TWO 7/16 X 1 5/8 BOLTS, TWO 7/16 LOCKWASHERS, AND TWO 7/16 NUTS.
4. CHECK TO SEE THAT LOCKWASHERS ARE BEHIND EACH NUT AS REQUIRED. TIGHTEN NUTS AND BOLTS SECURELY.

MAXIMUM GROSS WEIGHT TO BE TOWED INCLUDING THE WEIGHT OF THE TRAILER - 2000 LBS.

MAXIMUM TONGUE LOAD WITH LOADED TRAILER - 200 LBS.

THIS HITCH IS DESIGNED FOR LOADS UP TO LIMITS STATED ABOVE BASED ON PROPER INSTALLATION, NORMAL AND PROPER USE, BUT DUE TO THE POSSIBILITY OF IMPROPER INSTALLATION, OVERLOADING, OR OTHER ABUSE NO LOAD GUARANTEE IS HEREBY EXPRESSED OR IMPLIED.

REMOVE TRAILER HITCH BALL WHEN NOT IN USE.

1965 - 1966 - 1967 ECONOLINE



COPYRIGHT © 1965 FORD MOTOR COMPANY
DEARBORN, MICHIGAN

I.S. 2138

INSTALLATION - KIT - TRAILER HITCH

